


AD'VANCE ASSEMBLY INSTRUCTIONS



Before assembling, please read this document carefully, together with the « Using and maintenance instructions » ref. NMU-FR-06-01 attached.

MANUAL STORAGE ONLY

1

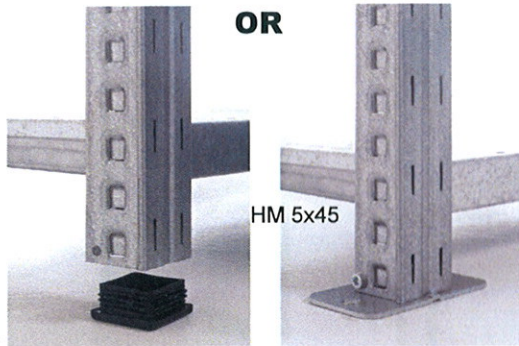


2

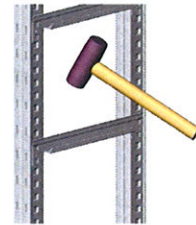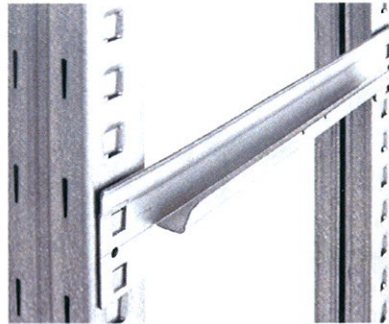


Place the crossbars at the desired height for shelves.

3

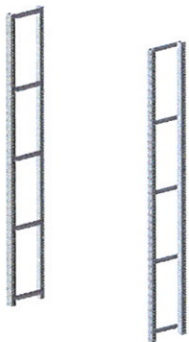

Assemble the side frames and check that the crossbars are in the same position on each side.

4

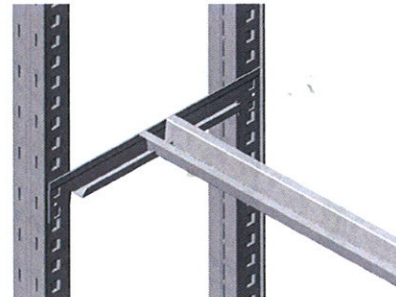


Optional : the inforing bar.



Place the shelves on the crossbars according to the plan above.
Fix the bottom shelf first then a shelf at the top.






6

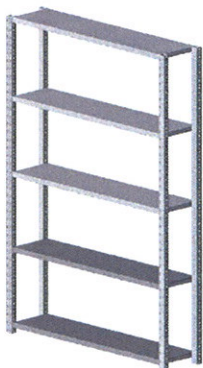

7

Assembling the crossbrace

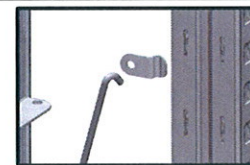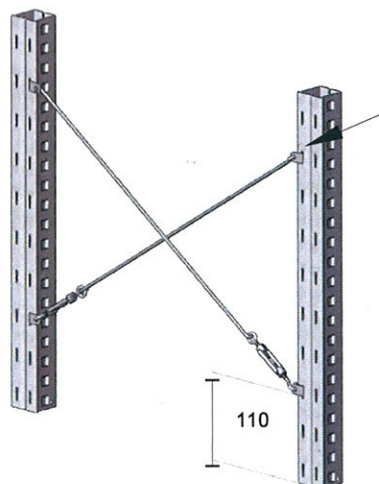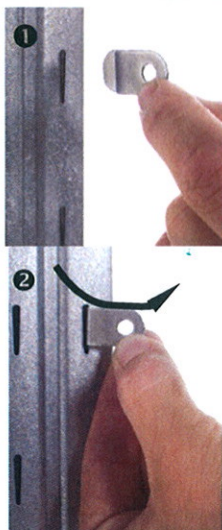


AD'VANCE ASSEMBLY INSTRUCTIONS

Before assembling, please read this document carefully, together with the « Using and maintenance instructions »
ref. NMU-FR-06-01 attached.

MANUAL STORAGE ONLY



8 Assembly of the following bay.

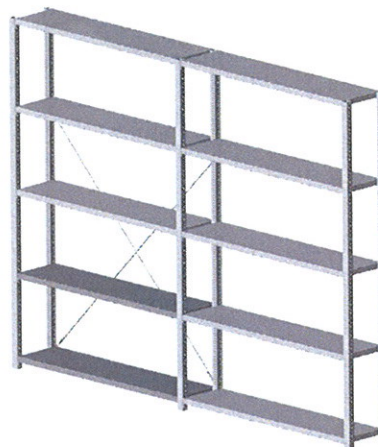


Etc...

Use a crossbrace every 4 bays unless otherwise specified.

9 Assembling the backs.

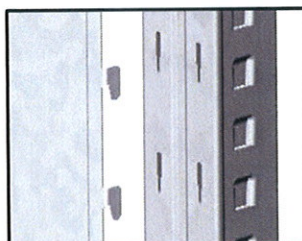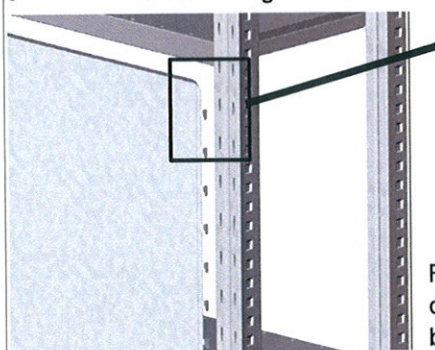



Fit the back-wall into the perforations of the uprights working from the bottom up.

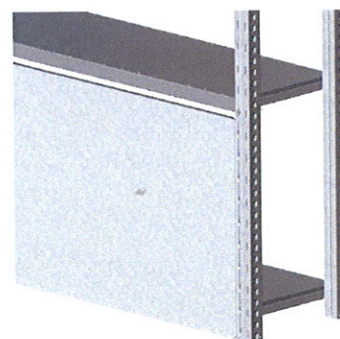

10 Assembly of the sides.




Then fix the rest of the panels.

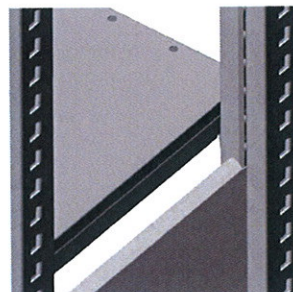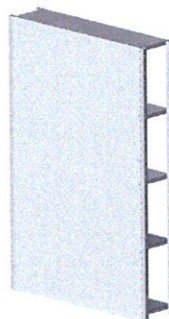

Insert the sides into the slots of the uprights starting at the bottom and following the panel profile.

11

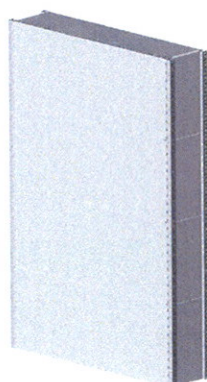

MANUAL STORAGE ONLY.

- Max. height of the first shelf : 200 mm from the bottom
- Maximum space between 2 shelves : 500 mm
- Please store the heaviest loads at the bottom of the bay.